


Portable Hot Air Dryer HD2 Type Maintenance

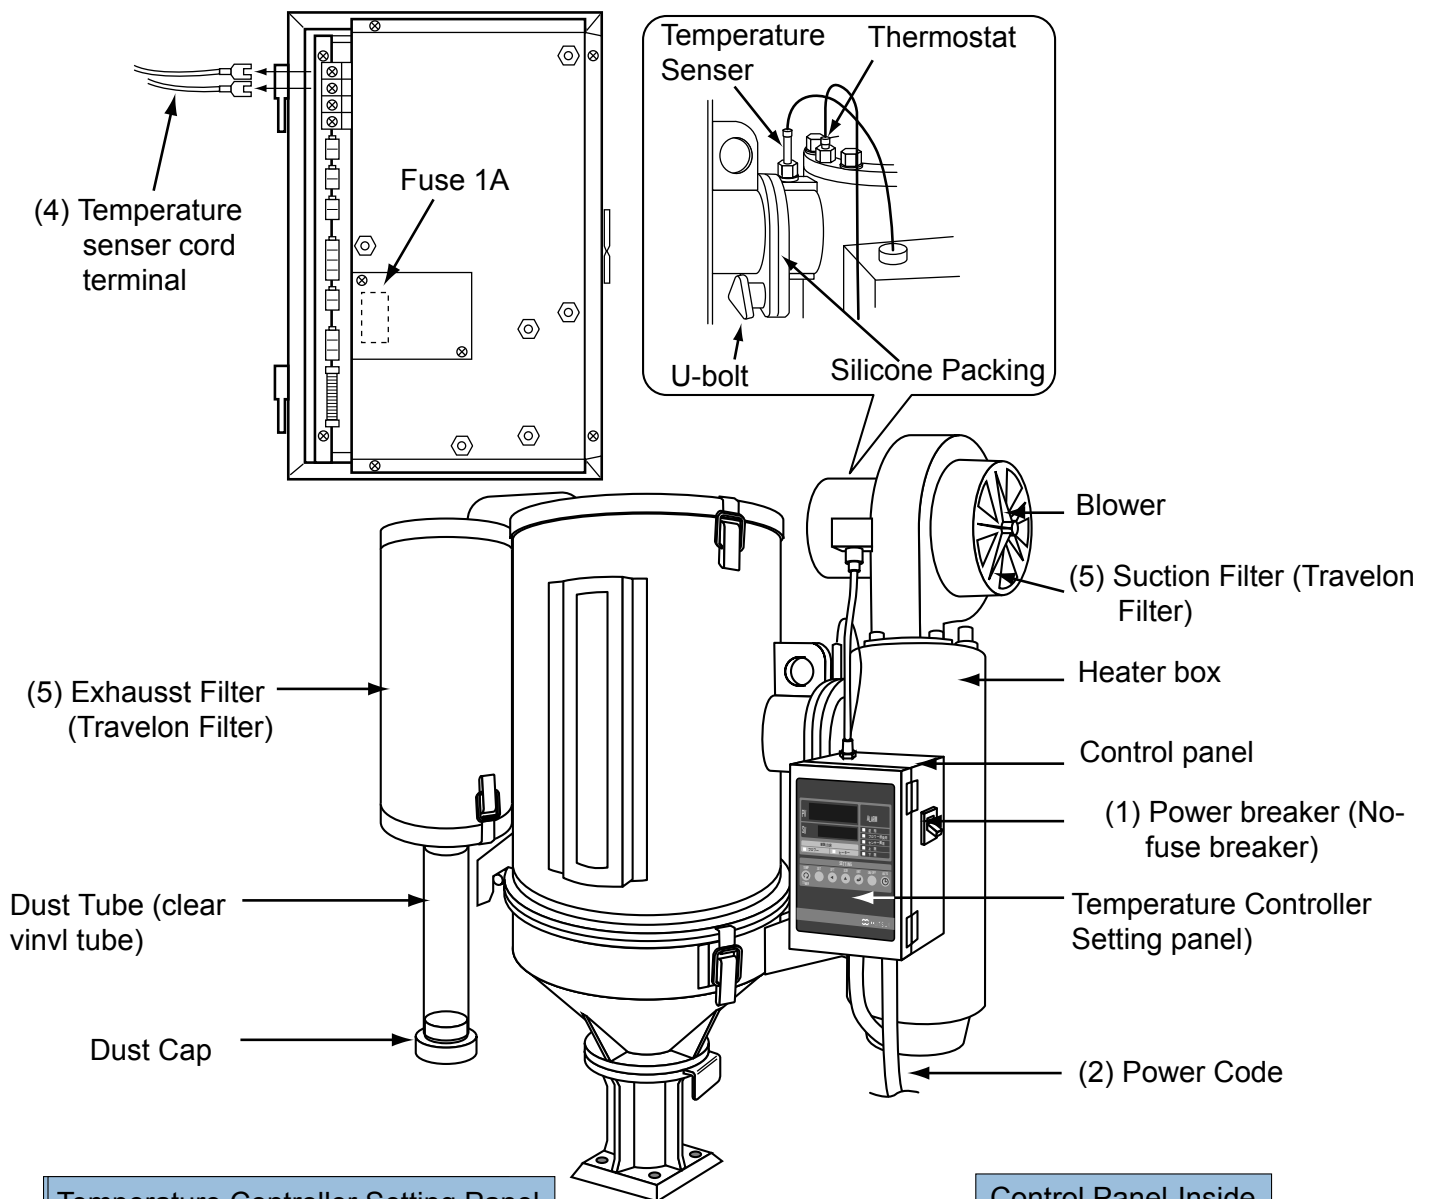

Temperature Controller Setting Panel

Control Panel-Inside

(7) E5ZA-5J (new panel)




- ALARM**
Will display alarms
- Reverse Phase
 - Blower Overload
 - Sensor Disconnect
 - Upper Limit
 - Lower Limit
- MONITOR**
Will display conditions of each unit
- Blower
 - Heater

(7) HD2 - CP - J (old panel)



(3) Electromagnetic switch (Therma relay) (1) Power (No fuse breaker)

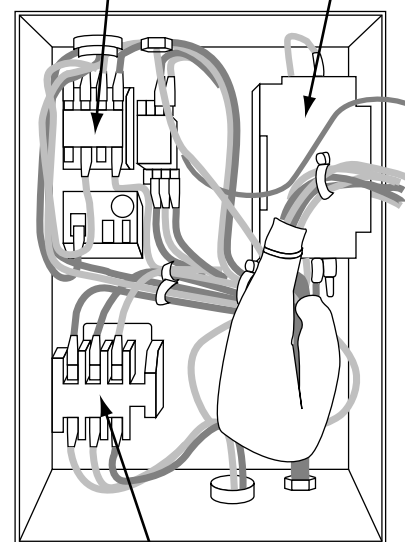

(6) Solenoid Contactor (Heater relay)