

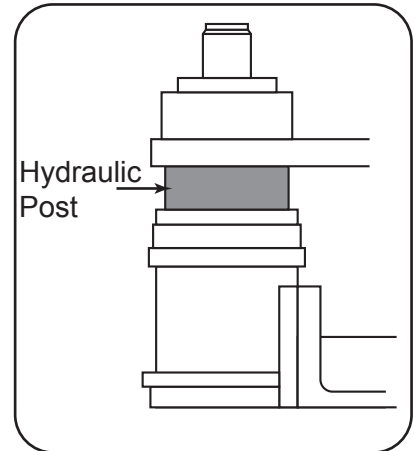


# Jet Color Blender JCM Type Maintenance

(2) Pnuematic Lift Unit - Apply amount of grease onto up/down post during every material or color change.

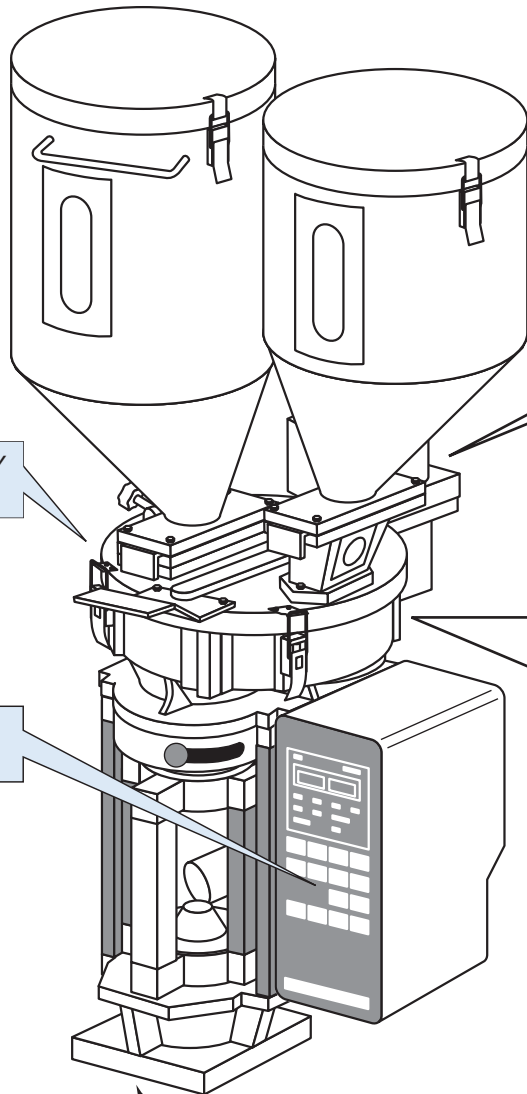

(1) Measuring Section - Clean out particles after every material change or color change.

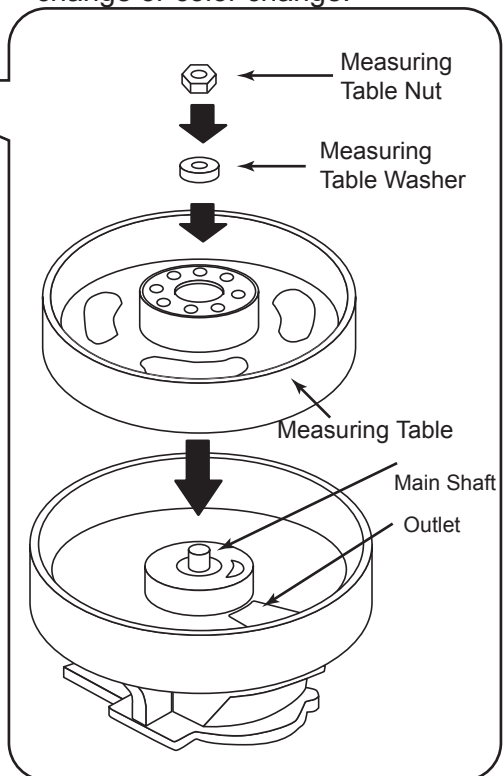

DANGER: FINGER MAY GET CAUGHT

KEEP WATER AWAY

(3) JCM Base Bolt: Check looseness every 6 months