


Portable Hot Air Dryer HD2 Type Maintenance

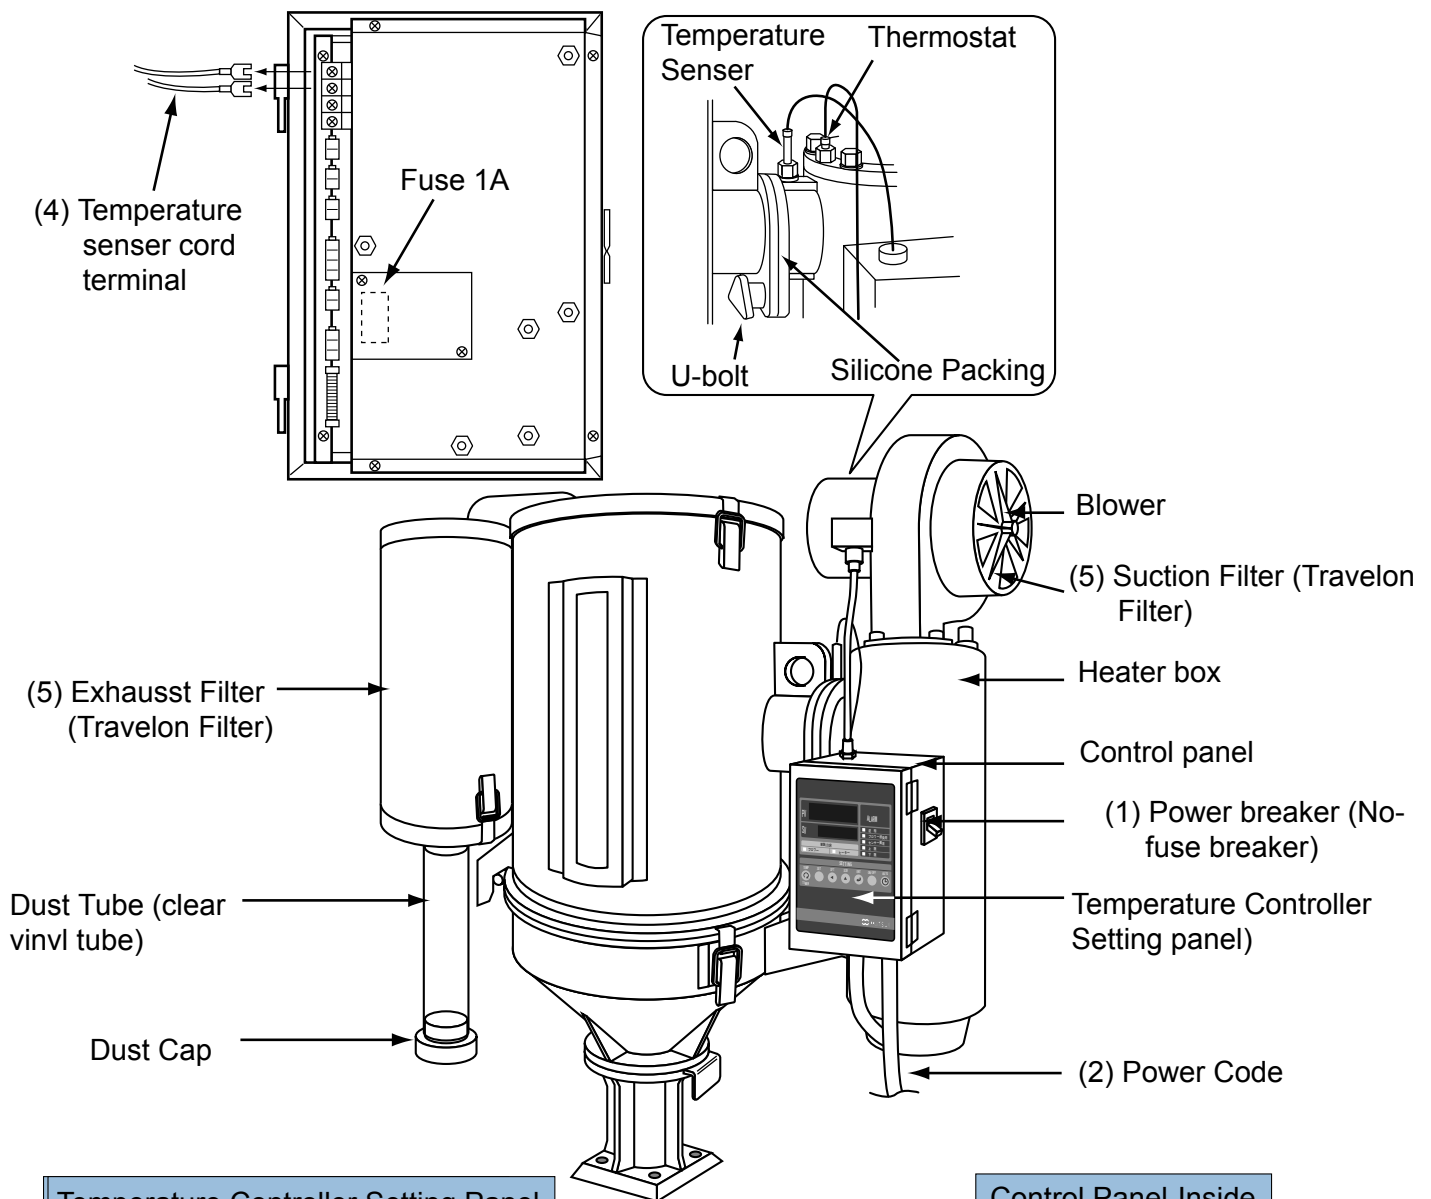

Temperature Controller Setting Panel

Control Panel-Inside

(7) E5ZA-5J (new panel)



ALARM
Will display alarms

- Reverse Phase
- Blower Overload
- Sensor Disconnect
- Upper Limit
- Lower Limit


MONITOR
Will display conditions of each unit

- Blower
- Heater

(7) HD2 - CP - J (old panel)



(3) Electromagnetic switch (Therma relay) (1) Power (No fuse breaker)

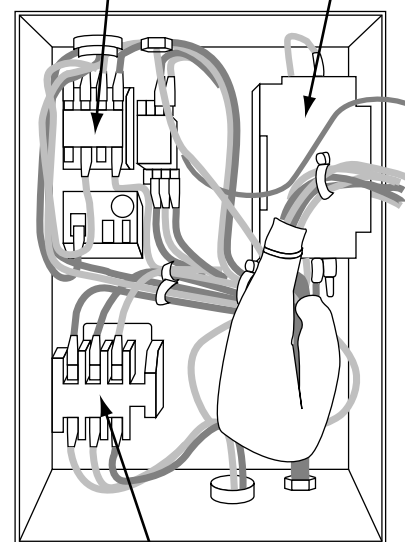

(6) Solenoid Contactor (Heater relay)