


Portable Hot Air Dryer MGD


(1) Dust Tube
Clean Daily

(4) Exhaust Filter
Clean weekly


(8) Jet Clone Filter: Clean weekly or
after every material replacement

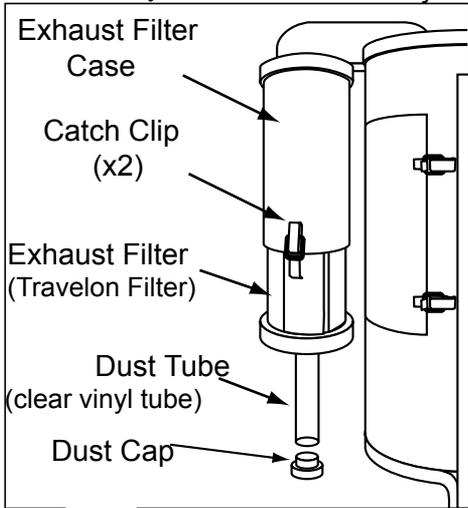

Note: The surface temperature of the exhaust filter will run up to 130°C when operating. Do not come into contact with filter.

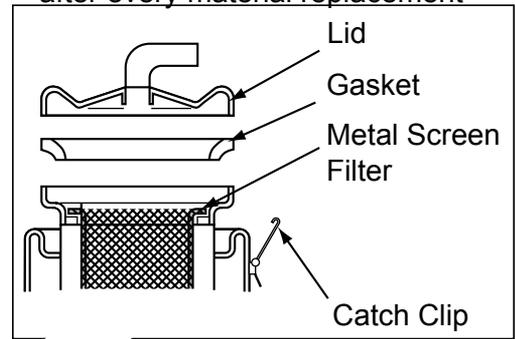

(3) Exhaust Filter
Clean monthly

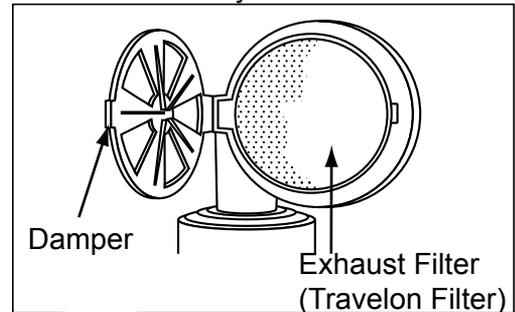

(9) Check hose
Weekly




(2) Temperature
Controller

(10) Electromagnetic
Switch, Contractor

(11) Terminal: Check
looseness monthly

(12) Bolt/Nuts:
Check looseness

(7) Air Kit:
Clean, Inspect weekly

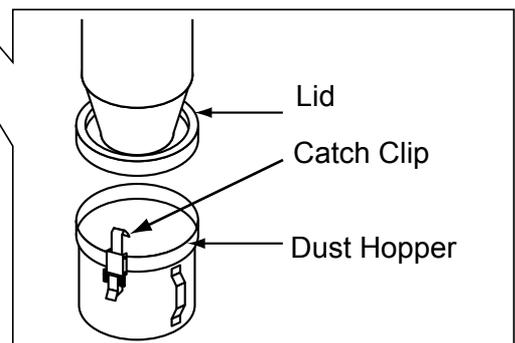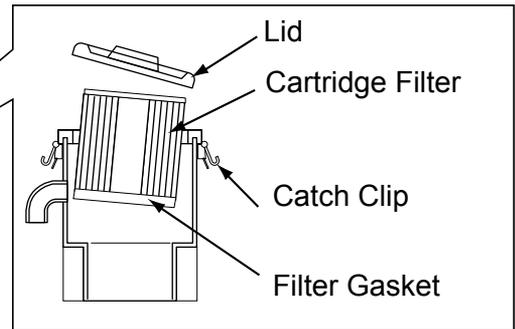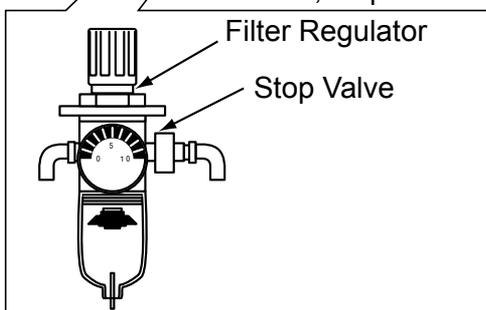

* If gasket is deteriorating badly, deforming, discoloring, hardening, replace with new packing.