



# Portable Dehumidifying Dryer (MJ3) Maintenance

## < Regeneration Filter >

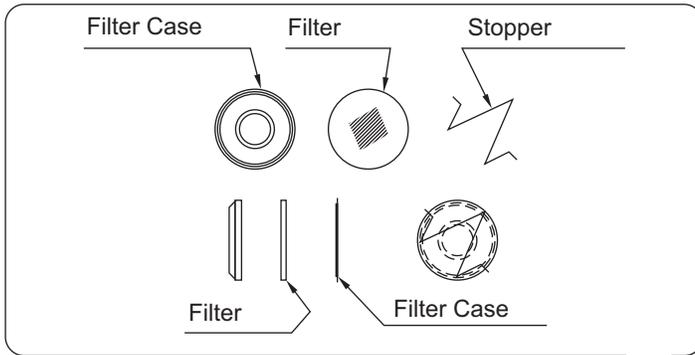


(3) Hose - check disconnection, looseness and air leaks - weekly


(4) Filter - clean weekly

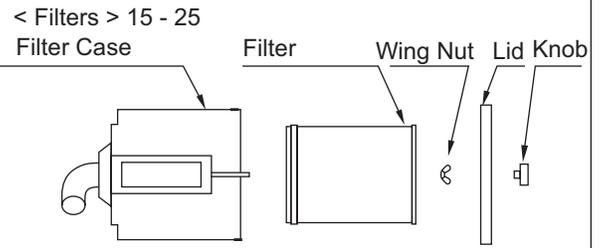

< Process Filter > 50 -75

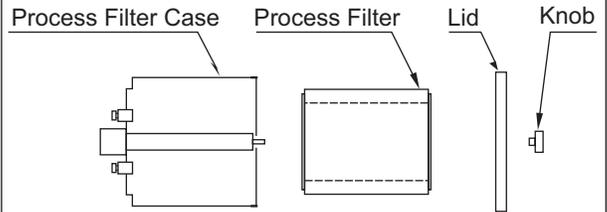

< Process Filter > 100 - 150

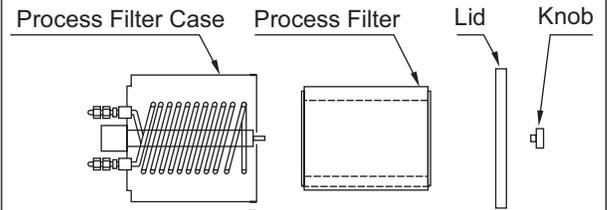

(2) Temperature Controller - check daily

(5) Electromagnetic witch, Contact - check weekly

(7) Terminals - check for looseness monthly


(8) Bolts/Nuts - check looseness every 6 months

(6) Air Kit - inspect weekly

(9) Roter Drive Belt - check damage, rotation every 6 months

(10) Afer cooler - clean every 6 months

Remove lid, inner section, cooling jacket(inner) to clean out gas compounds from both inner and outer cooling jackets.

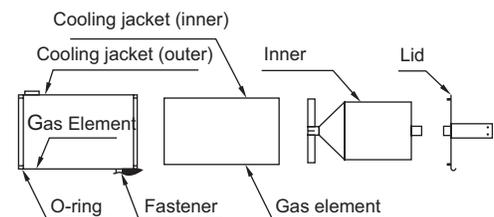

(1) Cooling Water - check daily

